

TANKKD

A HASTINGS ORIGINAL

Installation stock tank with a wood fired heater and filter pump.



1. Inlet-outlet connectors:

Install the inlet-outlet pieces in the correct holes we have made.
The outlet goes at the bottom and the sealing ring is always on the inside of



the tank.

The inlet goes at the top, also here the sealing ring also on the inside of the tank.



Place the taps/valves at the end of the inlet and outlet.



Outside tank

- Install the filter pump as written in the manual from the factory (poolex, bestway or intex)
- Connect the plastic hose from the outlet on the tank to the lowest inlet on the filter pump. Use the clamps to tighten the hose.



- Connect a heat hose from the filter pump to the lowest inlet of the heater. Don't forget the clamps to tighten the hose.



- The last step is going from the top outlet on the heater to the black inlet on the pool.



Now you can fill the pool at least 5cm above the outlets.

ATTENTION! ALWAYS TURN ON THE PUMP WHEN USING THE HEATER
How to use hot tub with filter pump

1. Check if the valves are open before you start the fire.



2. The sand filter pump must be turned on before starting the fire.
3. Start the fire slowly and build up (especially the first 2 times)

4. when the fire is burning well turn the knob on the outlet 50% closed so the water circulates slower and heats up faster.



5. Add wood now and then and stir the water so the colder water on the surface is mixing with the hot water on top.
6. Once the water is above 32 degrees, control the fire so it doesn't get too hot. The perfect temperature is around 38 degrees. If the water is getting too hot, open the valves on the inlet so the water circulates faster and is not heating up anymore. Or add some cold water to the tank.
7. Always let the filter pump run during use and until at least 1 hour after the end of the fire, to prevent overheating of the stove, which leads to damage for which we cannot be held liable.

IMPORTANT!!!!

Put the stove always on a stable underground. Start a small fire and build up step by step. If you use too much wood at once, you won't have a good water circulation and you can damage the heater.

Use dry wood

Do not leave the stove unattended.

At temp. below zero drain the heaters and pumps (taps are provided on both models).

!! Never leave children unattended. !!

We are not responsible for any accidents or incorrect manipulation and / or installation of the delivered products.

Condensation may occur at the beginning of the heating process causing water to leak from the stove. This stops once the water in the stove reaches a certain temperature.

If you have any questions, contact us via whatsapp or email.

Enjoy your hot tub...